


CBM

Ventiladores centrífugos
Centrifugal fans
Centrifuge simple ouïe
Einbau-und Bentrriebsanleitung Radiallüfter
Ventilatori centrifughi
Ventiladores centrífugos
Wentylatory promieniowe
Centrifugális ventilátorok

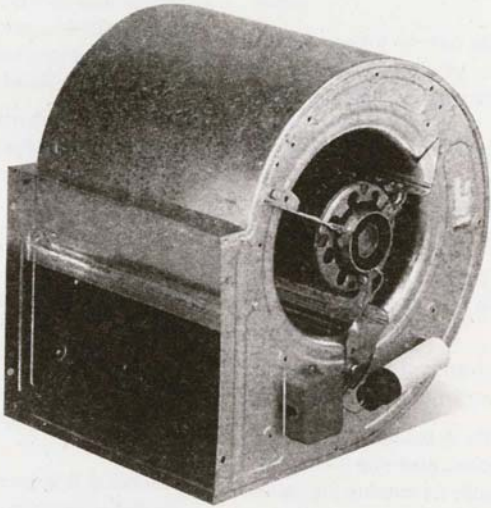

ENGLISH

The fans these series have been manufactured to the rigorous standard ISO 9001.

We recommend you check the following points on receiving your fan:

1. That it is the correct size.
2. That the execution is correct. (wall, tubular, etc.)
3. That the details on the rating plate are those you require: voltage, frequency, speed, etc.

Install according to current regulations in each country.

Installation

Mount the extractor in a site well protected from the weather.

Make sure that the fan is protected against vibration and knocks.

Before making electrical connection, check that the impeller is not obstructed in any way.

Electrical Connection.

Check that the voltage and frequency of the mains are the same as those indicated on the rating plate on the fan (max.

variation of tension and frequency $\pm 5\%$).

Once working, the current absorbed by the motor must not exceed that indicated on the rating plate.

This series incorporates thermal protection in the motor winding.

The thermal protector stops the motor when there is a problem, thus avoiding overloads and excessive temperatures, giving longer motor life and increasing user safety.

Connection to the mains be made following the diagrams accompanying each unit.

Check that correct connection has been made to earth.

Before handling the fan, be sure that it is disconnected, not just switched off.

Impeller.

The impeller is dynamically balanced.

Working conditions and maintenance.

The temperature of the air through the unit must not exceed 40 °C.

Avoid excessive accumulation of dust and dirt on the fan which

makes cooling difficult and may affect the balance of the impeller.

Clean regularly.

All fans wether fitted with sleeve bearings or ball bearings will require no lubrication.

Accessories

There is range of accessories to facilitate and complement the installation, which may be obtained in the same establishment where you bought the apparatus (see accessory selection table).

S&P have range of speed controllers both for single and three-phase units.

Soler & Palau reserve the right to make changes without previous notice.

TABLA DE SELECCION DE ACCESORIOS
 ACCESSORY SELECTION TABLE
 TABLEAUX DE SELECTION DE ACCESOIRES
 ZUBEHÖRTABELLE
 CUADRO DI SELEZIONE DEGLI ACCESORI
 TABELA DE SELECÇÃO DE ACCESÓRIOS
 TABELA DOBORU WYPOSAŻENIA
 TARTOZÉK JEGYZÉK

Ventilador Fan Ventilateur Ventilatoren Ventilatori Ventilador Wentylatory Ventilátor	Defensa de aspiración Inlet guard Protection a l'aspiration Berührungsschutzgitter (saugselting) Griglia de protezione (bocca d'aspirazione) Defesa do lado da aspiração Ochrona wlotu Szívó oldali védőrács
CBM-180/180 1/10CV CBM-180/180 1/5CV	DEF-180/71
CBM-240/180 1/6CV CBM-240/180 1/3CV	DEF-240/71
CBM-240/240 1/6CV CBM-240/240 1/3CV	DEF-240/71
CBM/4-240/240 1/2CV	DEF-240/80
CBM-270/200 1/3CV	DEF-270/71
CBM-270/200 1/2CV CBM/4-270/200 1/2CV	DEF-270/80
CBM-270/270 1/3CV	DEF-270/71
CBM-270/270 1/2CV CBM/4-270/270 3/4CV	DEF-270/80
CBM-320/240 3/4CV CBM-320/240 1,5CV	DEF-320/80
CBM-320/320 3/4CV CBM-320/320 1,5CV	DEF-320/80
CBM-380/380	DEF-380/100